
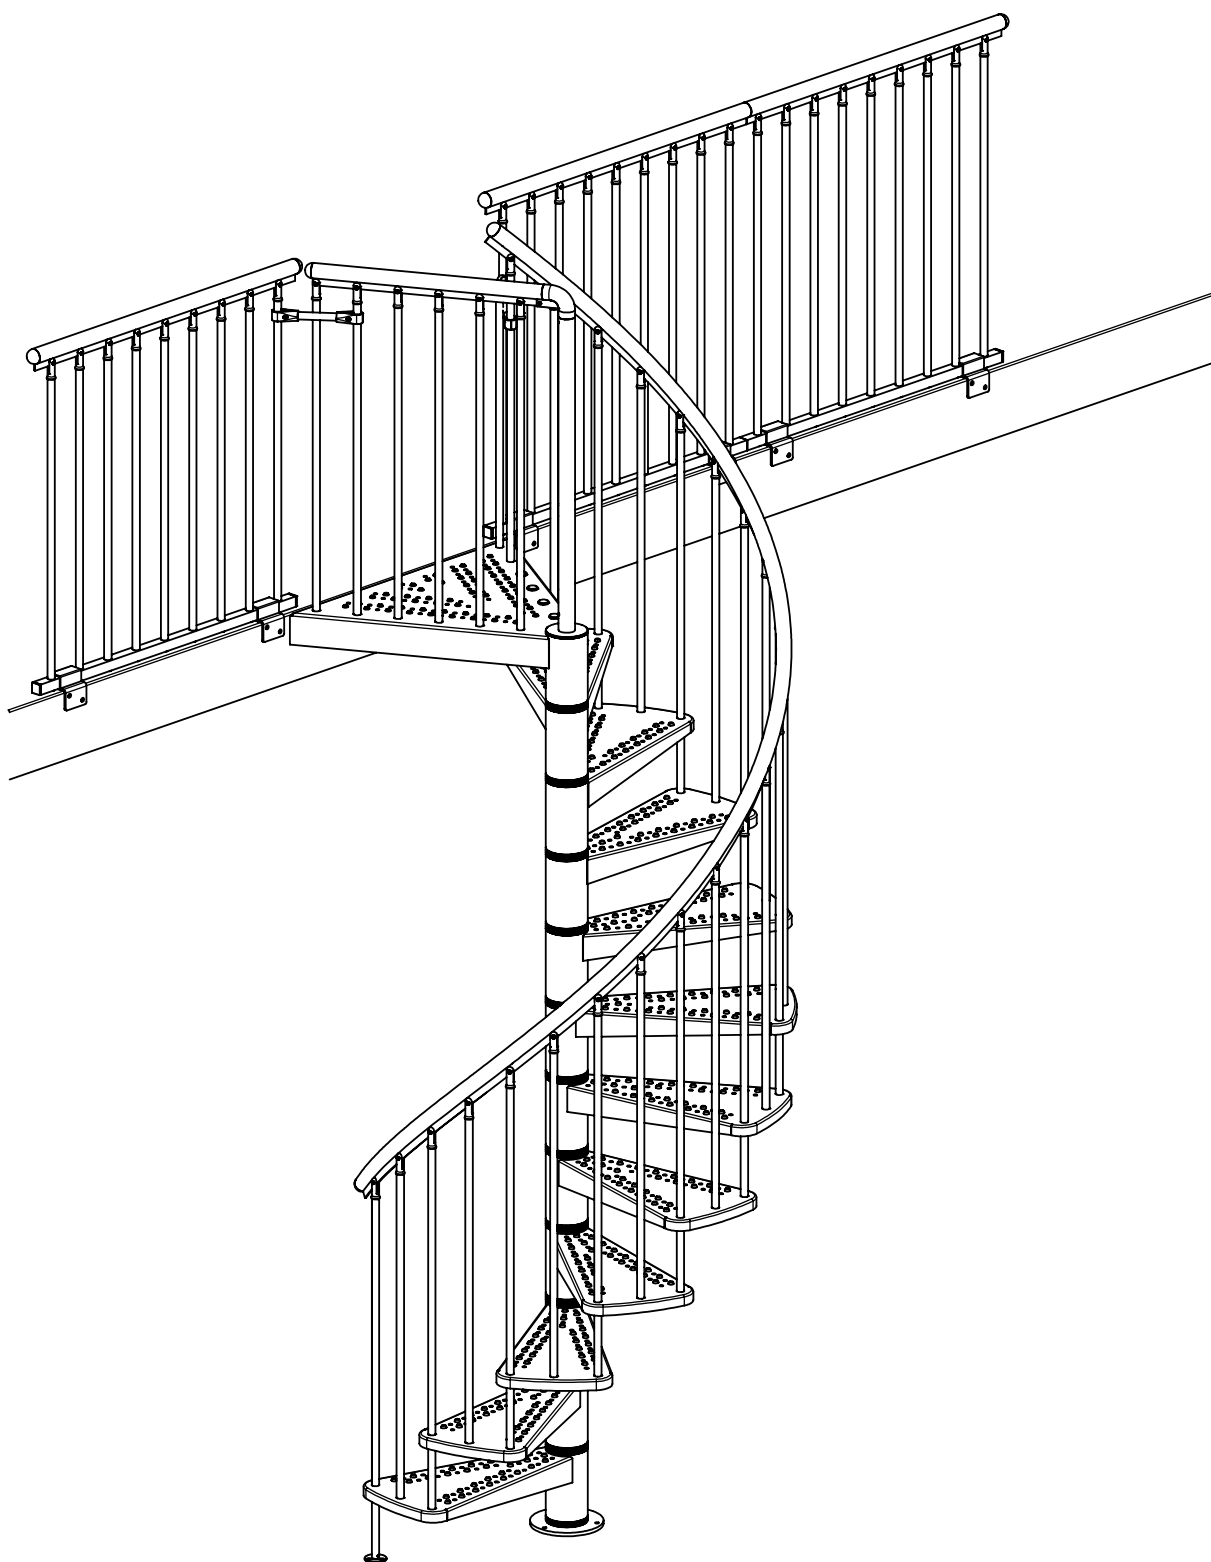

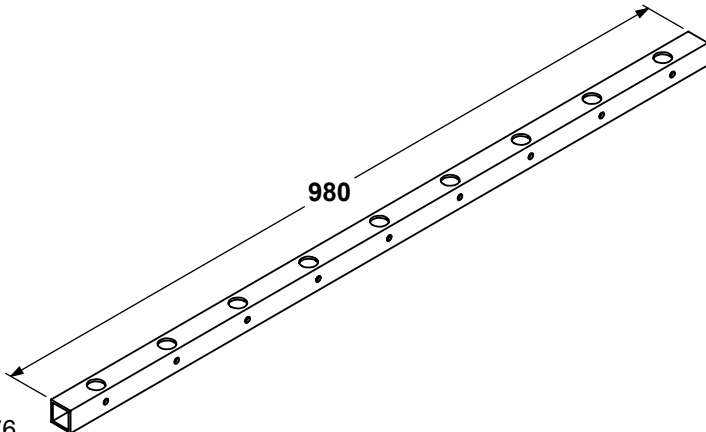
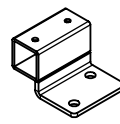
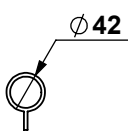
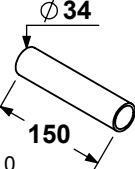
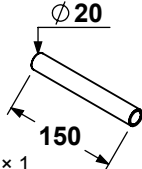


БАЛКОННОЕ ОГРАЖДЕНИЕ

Инструкция по монтажу



①  902 (I) : × 9 (II) : × 9 K1-39170	②  980 (I) : × 1 (II) : × 1 K1-30276 ③  (I) : × 2 (II) : × 2 K2-30230 ④  (I) : × 2 (II) : × 0 K1-30020 ⑤  (I) : × 9 (II) : × 9 K1-39050 ⑥  (I) : × 1 (II) : × 0 K1-19340	⑦  Φ 42 (I) : × 1 (II) : × 1 K1-39110 ⑧  (I) : × 2 (II) : × 0 K1-39010 ⑨  Φ 34 150 (I) : × 0 (II) : × 1 K1-39011 ⑩  (I) : × 0 (II) : × 1 K1-39012 ⑪  (I) : × 2 (II) : × 0 K2-39190 ⑫  Φ 20 150 (I) : × 1 (II) : × 0 K1-39171	⑭  (I) : × 1 (II) : × 0 K2-30165			
⑳  (I) : × 6 (II) : × 4 K3-06068 Ø8×60	㉑  (I) : × 6 (II) : × 4 K3-04041 Ø8	㉒  (I) : × 6 (II) : × 4 K3-08004 Ø10×60	㉓  (I) : × 15 (II) : × 13 K3-05020 M8×8	㉔  (I) : × 9 (II) : × 9 K3-01201 M5×14	㉕  (I) : × 9 (II) : × 9 K3-03050 M5	㉖  (I) : × 1 (II) : × 1 K3-90001

I	II
Стартовый комплект	Дополнительный комплект

